

# Smart IP Video Wall PAD (VWP)

RTSP based IP Camera Function



**AddPac**

**AddPac Technology**

2015, Sales and Marketing


# Contents

- AddPac Video Wall PAD IP Camera Service
- External IP Camera Operation Diagram
- External IP Camera Configuration
- Local Built-in IP Camera Operation Diagram
- Local Built-in IP Camera Configuration

# Video Wall PAD IP Camera Service

- External IP Camera Play (AddPac or Other Vendor IP Camera)
  - Decode and Display at AP-VWP (Local LCD Display)
  - Decode and Display at Smart Phone / PAD
- Local IP Camera Play
  - Decode and Display at Smart Phone / PAD
  - Monitoring Living Room with Built-In Camera

# External IP Camera Operation

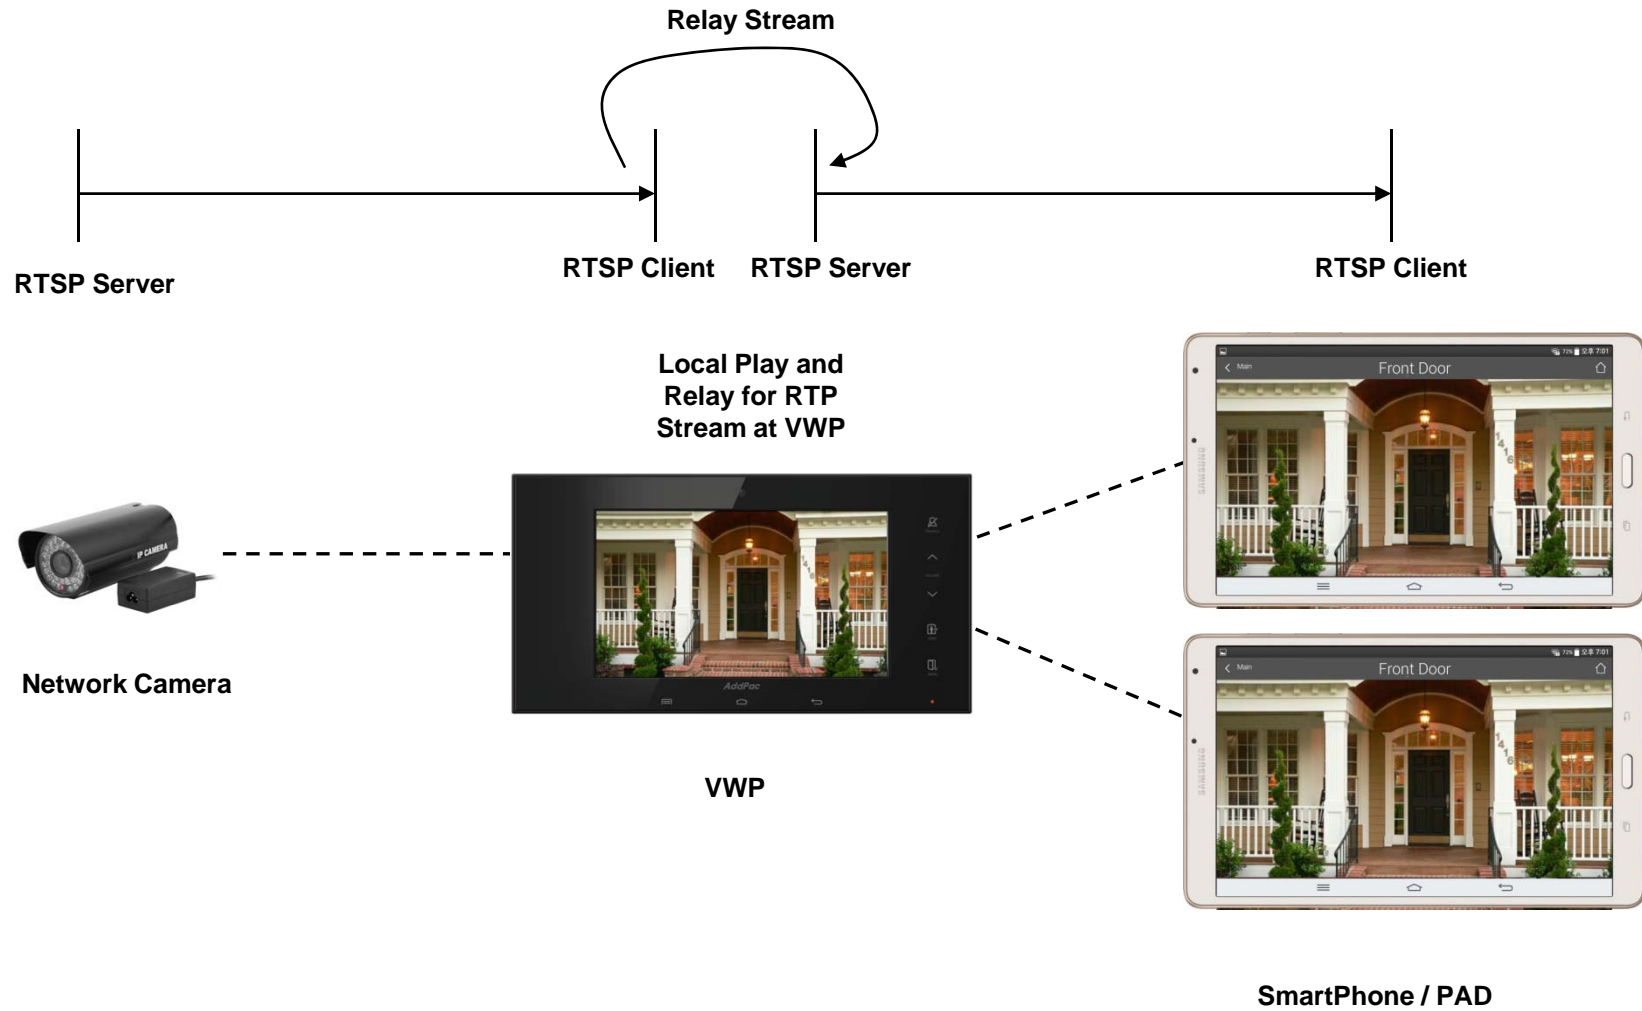

# Configuration External IP Camera

Camera Info

Name root

RTSP URL rtsp://192.168.1.11/video

Use TCP

Favorite

Authentication

User Name admin


Password \*\*\*\*\*

Remote Camera Name

Remote Camera URL

Transport (UDP or TCP)

# Local Built-in IP Camera Operation

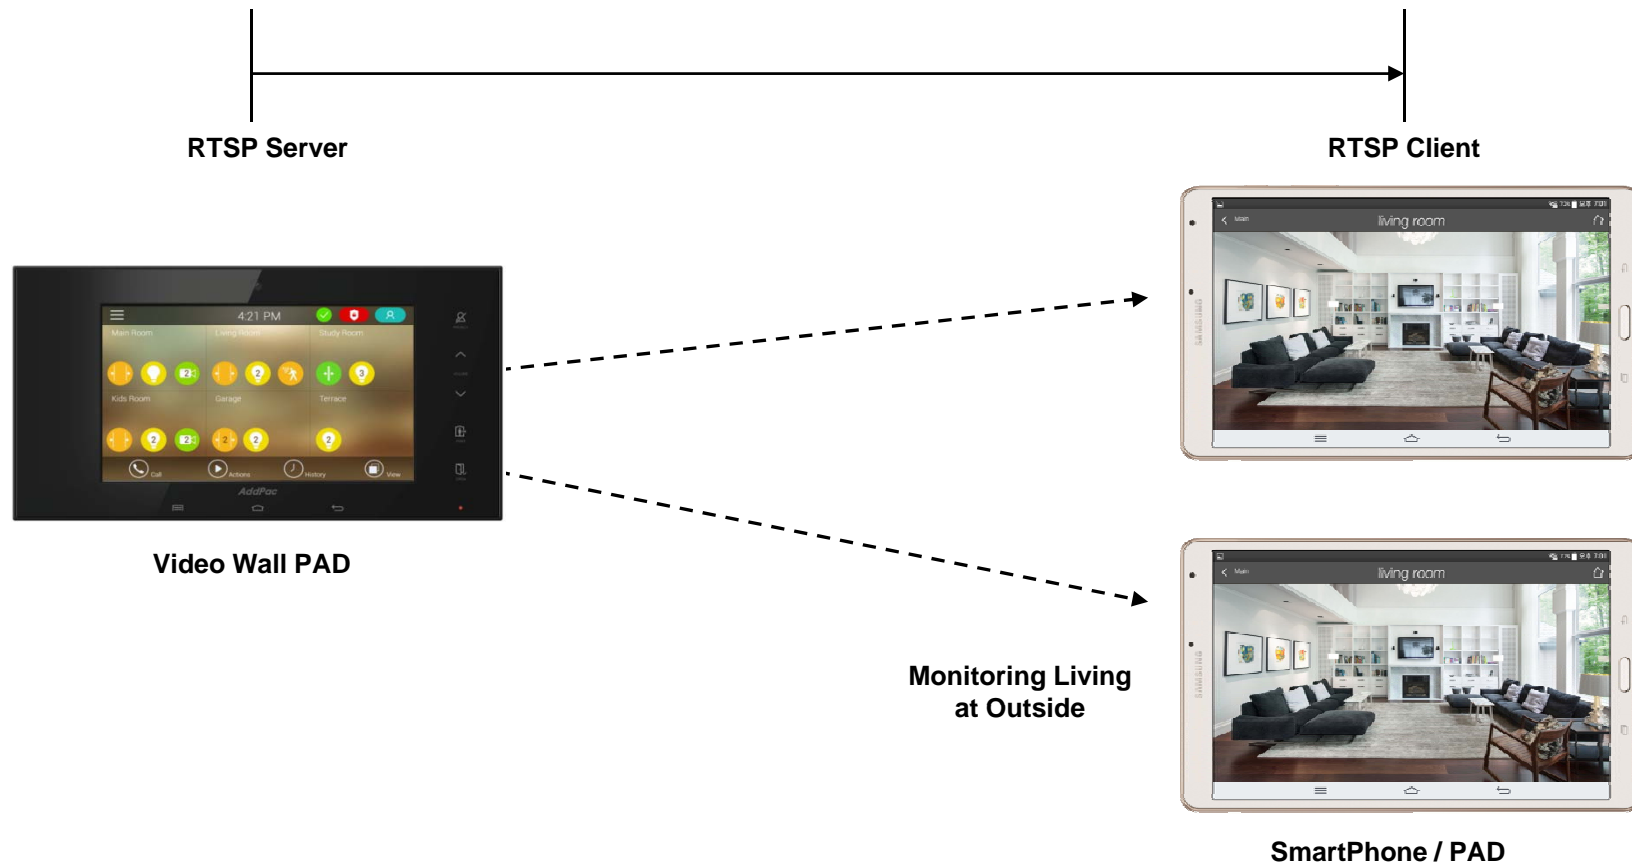

# Configuration Local Built-In IP Camera

Camera Info

Name	Local Camera	Local Camera Name
RTSP URL	rtsp://127.0.0.1/local	Local Camera URL (127.0.0.1 is Loopback)
Use TCP	<input checked="" type="checkbox"/>	Transport (UDP or TCP)
Favorite	<input checked="" type="checkbox"/>	

Authentication

User Name	admin
Password	*****